


You might know us as Power Brake & Spring

Same great company that has served you with Pride and Integrity since 1952
With a new name to reflect our expanded offering of products and services

How to Measure a Leaf Spring

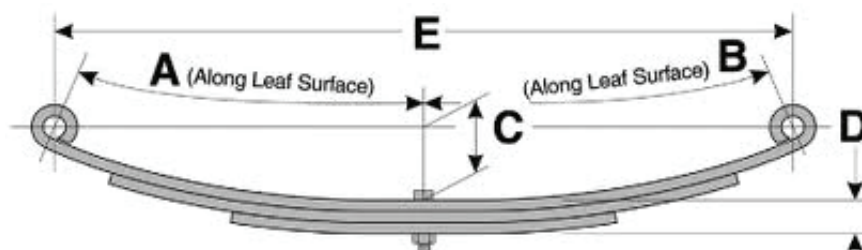





- A. Measure main leaf from center of the eye to the center of the center bolt
- B. Main leaf from center of center bolt to center of eye (or options below)
- C. Measure arch - Top of spring to straight line between ends of spring
- D. Thickness of the spring stack at the center of the spring
- E. Overall length of spring from end to end straight across (options below)

Additional Information:

1. Width across top of spring
2. ID type of spring

(Use Chart on Right)

On some light duty applications you might also need the door code for the spring. This is found on the end of the driver side door.

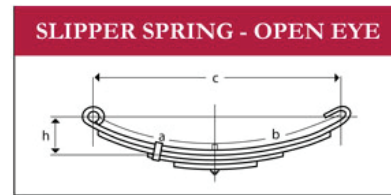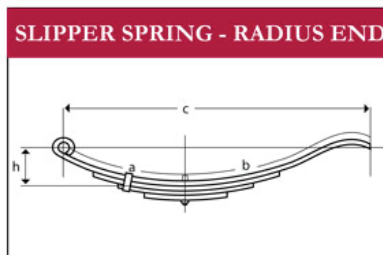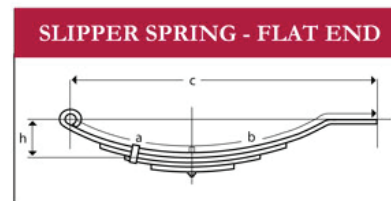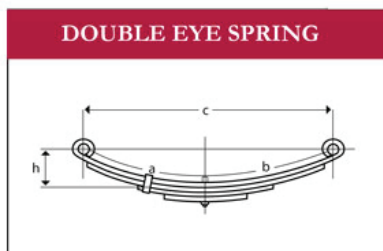

CALL YOUR LOCAL PBS STORE WITH THESE MEASUREMENTS

SOUTH BEND

6139 Parkland Drive
South Bend, IN 46628
(800) 282-1044
Fax (574) 273-2211

ELKHART

5035 Verdant Street
Elkhart, IN 46516
(800) 293-9459
Fax (574) 296-9730

GARY

7201 Melton Road
Gary, IN 46403
(888) 785-4353
Fax (574) 939-8775

ROCHESTER

1407 N Meridian
Rochester, IN 46975
(800) 839-0323
Fax (574) 224-3331